


2019 T1 ONLY Installation Addendum

Due to changes between 2019 and 2020 its necessary to add one or two additional components to your T1 truck to facilitate proper full OEM operation of your new Wireless Car Play / Android Auto Radio. These changes include the addition of a new add-on WiFi antenna and a new 2020+ Spec Rear camera ONLY if you have RPO UVB (Single Rear Camera) equipped vehicle. If you have a 270/360 Camera Equipped vehicle you only need to add the WiFi antenna. We will list the part numbers for both items in the product description just in case they should change as supersession is relatively common in GM parts but the installation would remain the same.


WiFi Antenna Installation:

This one is more of a choose your own adventure install. The antenna should be as high as possible in the dash with VERTICAL orientation (wire pointing down!) adhered to a plastic surface if at all possible, to minimize RF interference. There likely will be extra slack on the cable so be sure to coil it up and secure it in a way that it won't rattle against other surfaces during driving. Now we realize the connectors on the antennas are likely not the proper beige color but more likely blue/green please resist the urge to plug them into the unused blue connector. Plug it into the beige connector circled below:

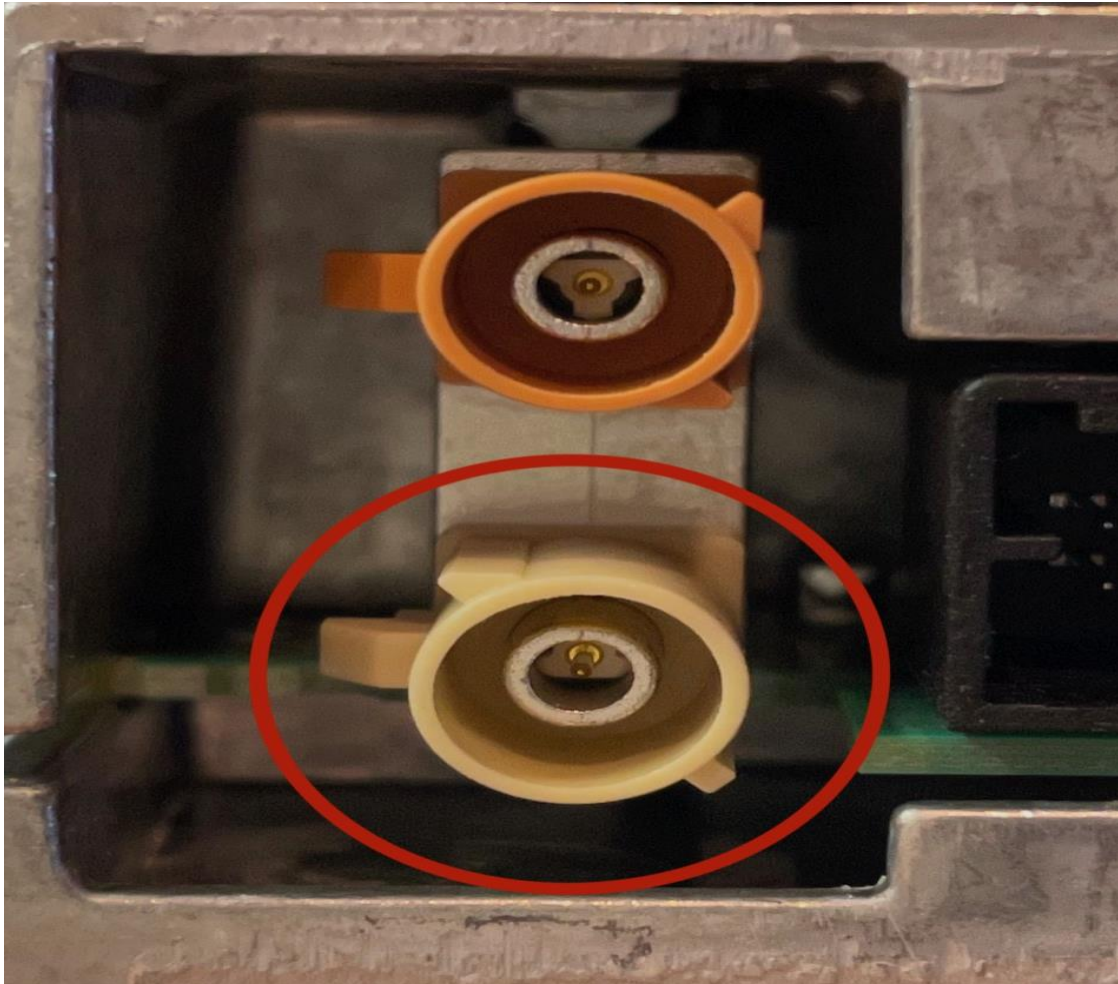


UVB Only Camera Installation:


First remove the endgate access hole cover panel (10 Fasteners)

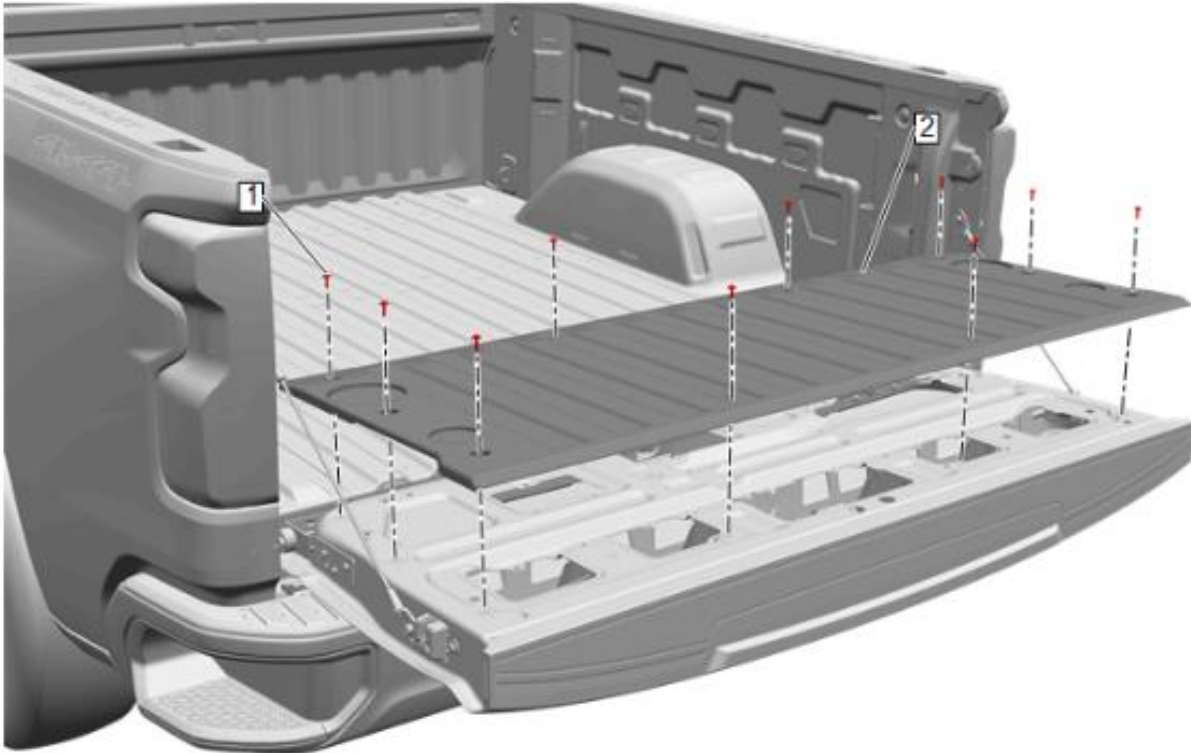

Next remove the endgate late handle assembly (disconnect the electrical connectors first!) by removing the two fasteners that secure it.

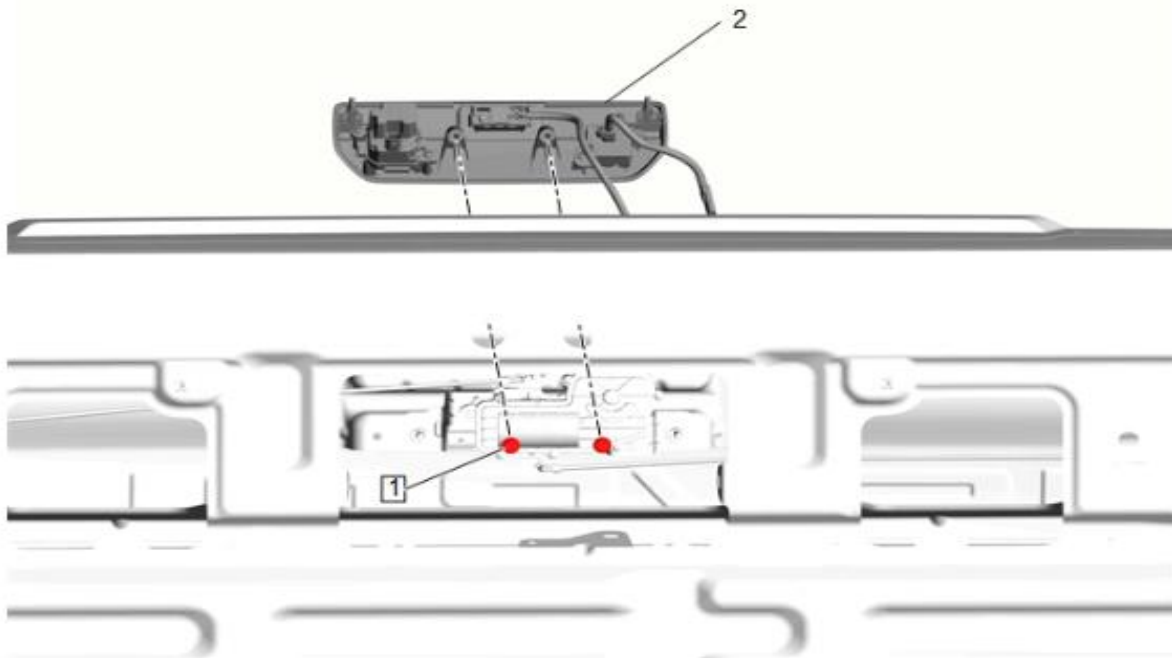

Next remove the factory camera retention bracket and then remove the camera assembly.

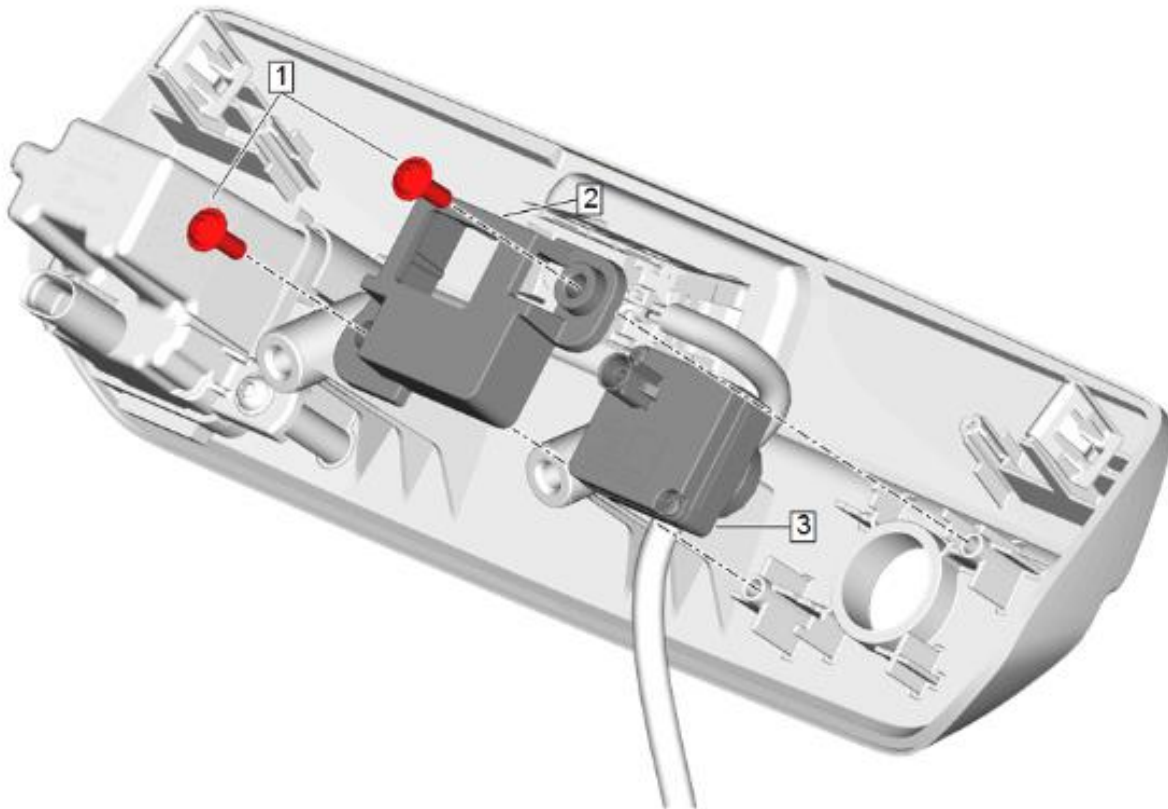

Reverse the above procedures with your new camera module. Make sure to test the new camera module before full reassembly by attaching it to the Coax cable and checking function on the radio. If all is well (which it should be) reassemble and enjoy!